

VNBW AD 2.19 RADIO NAVIGATION AND LANDING AID

Type of Aid MAG VAR Type of supported OP (for VOR/ILS/MLS give declinations)	ID	Frequency	OPR Hours	Position of Transmitting Antenna Coordinates	Elevation of DME Transmitting Antenna	Remarks
1	2	3	4	5	6	7
DVOR/DME 0°E	BWA	114.7 MHZ CHN 94 X	H24	273012 N 0832558 E	112 m	

VNBW AD 2.20 LOCAL TRAFFIC REGULATIONS

To be developed

VNBW AD 2.21 NOISE ABATEMENT PROCEDURES

NIL